

Code: UT-181A UNIVERSAL METER **UT-181A** UNI-T

## Warning!

Please read the user manual included in this work as it contains important information related with safety of installation and use of the device.

Only persons who read the user manual may use the device.

The user manual must be kept because it may be required in the future. The device is to be used exclusively for purposes specified in this user manual.

The device must be unpacked prior to starting-up. After removing the packaging make sure the device is in working order. If the product has defects, it should not be used until it is repaired.

The product is intended for use at home and commercial use and may not be used for other than intended use.

The manufacturer is not liable for damages resulting from not adhering to the rules contained in the user manual, therefore, we recommend to follow the aforementioned safety rules for operation and maintenance of the device. In this way you will ensure yourself safety and avoid causing damage to the device.

The manufacturer and the supplier are not liable for losses or damages arising out of the product, including financial or intangible losses, loss of profits, income, data, pleasure from use of the product or other products related with it - indirect, incidental or consequential loss or damage. The above provisions apply whether the loss or damage concerns:

- 1. Deterioration of quality or the lack of operation of the products or products related with it due to damage as well as the lack of access to the product when it is undergoing repair, which results in stoppage the loss of user's time or a break in business activity;
- 2. Improper results of operation of the product or products related with it;
- 3. It applies to losses and damages according to any legal category, including negligence and other losses, termination of a contract, expressed or implied guarantee and strict liability (even if the manufacturer or the supplier was notified about the possibility of occurrence of such damages).

#### **Safety measures:**

Particular attention at designing was directed to quality standards of the device where ensuring safety of operation is the most important factor.

The device must be secured against contact with caustic, staining and viscous fluids.

The device was designed in such a way that it restarts operation when power supply is restored after a break. Turn off the device before transporting it.

Prior to connecting the device to a power source check whether the supplied voltage is consistent with rated voltage specified in the user manual.

Attention! We recommend using protections to further protect the device from possible overvoltages in installations. Surge protectors are effective protection against accidental pass to the device voltages higher than the rated. Damages caused by pass the voltages higher than specified in manual, are not under warranty.

#### Proper product disposal:

A marking of a crossed out waste bin indicates that the product may not be disposed together with other household waste in the entire EU. To avoid possible damage to the natural environment of health due to uncontrolled waste disposal, therefore, it should be handed over for recycling, propagating in this way sustainable use of natural resources.

To return a worn-out product, use a collection and disposal system of this type of equipment or contact a seller from whom it was purchased. He will then be recycled in an environmentally-friendly way.

It is forbidden to use the device in case its power cord or plug is damaged, the device works incorrectly, was damaged or dropped. A damaged power cord or plug must be replaced with new ones by the manufacturer, personnel of service centre or a person with relevant qualifications in order to avoid the risk of electric shock. We do not recommend repairing the device on one's own for safety reasons.

The device is not intended for operation by persons (including children) with limited physical, sensory or mental capabilities as well as persons inexperienced in operation or not competent to operate of such device, unless the operation is supervised by a person responsible for their safety or in line with instructions for use provided by such person.

It is forbidden to touch the plug with wet hands! Pull the plug, never the cable, to pull out the plug from a socket.

The device is to be used exclusively according to its use described in this manual. Use of accessories not recommended by the manufacturer of the device may cause fire, electric shock or injuries.

Marking of a lightning inside a equilateral triangle signifies presence of dangerous voltage, contained under the cover of the device. It may be dangerous for user's life and health.





Code: UT-181A UNIVERSAL METER **UT-181A** UNI-T

The UT-181A is a universal digital meter used to measure: voltage, current, resistance, capacity, frequency, temperature and checking the correct operation of diodes. The meter has the function of automatic change of measuring ranges, as well as the relative measurement mode.

The device enables the graphical presentation of the trend of changes in the measured value.  $\,$ 



DC voltage measurement:

 $\begin{array}{l} 60 \text{ mV} \pm (0.025\% + 20) \ @ \ 0.001 \text{ mV} \,, \\ 600 \text{ mV} \pm (0.025\% + 5) \ @ \ 0.01 \text{ mV} \,, \\ 6 \text{ V} \pm (0.025\% + 5) \ @ \ 0.0001 \text{ V} \,, \\ 60 \text{ V} \pm (0.025\% + 5) \ @ \ 0.0001 \text{ V} \,, \\ 600 \text{ V} \pm (0.03\% + 5) \ @ \ 0.01 \text{ V} \,, \\ 1000 \text{ V} \pm (0.03\% + 5) \ @ \ 0.1 \text{ V} \end{array}$ 



Code: UT-181A UNIVERSAL METER **UT-181A** UNI-T

AC voltage measurement:	• 60 mV @ 0.001 mV :  ± (0.6% + 60) @ 45 Hz 1 kHz ,  ± (1.2% + 60) @ >1 kHz 20 kHz ,  ± (3.0% + 60) @ >20 kHz 10 kHz ,  ± (4.0% + 60) @ >20 kHz 100 kHz ,  • 600 mV @ 0.01 mV :  ± (0.3% + 30) @ 45 Hz 1 kHz  ± (1.2% + 40) @ >10 kHz 20 kHz ,  ± (3.0% + 40) @ >10 kHz 20 kHz ,  • 6 V @ 0.0001 V :  ± (0.3% + 30) @ 45 Hz 1 kHz  ± (1.2% + 40) @ >1 kHz 10 kHz ,  • 6 V @ 0.0001 V :  ± (0.3% + 30) @ 45 Hz 1 kHz ,  ± (4.0% + 40) @ >10 kHz 20 kHz ,  • 60 V @ 0.001 V :  ± (0.3% + 30) @ 45 Hz 1 kHz ,  ± (1.2% + 40) @ >10 kHz 20 kHz ,  • 60 V @ 0.001 V :  ± (0.3% + 30) @ 45 Hz 1 kHz ,  ± (1.2% + 40) @ >10 kHz 20 kHz ,  • 600 V @ 0.01 V :  ± (0.3% + 30) @ 45 Hz 10 kHz ,  • 600 V @ 0.01 V :  ± (0.3% + 30) @ 45 Hz 1 kHz ,  ± (1.2% + 40) @ >1 kHz 10 kHz ,  • 100 V @ 0.1 V :  ± (0.3% + 30) @ 45 Hz 1 kHz ,  ± (1.2% + 40) @ >1 kHz 20 kHz ,  • 1000 V @ 0.1 V :  ± (0.6% + 30) @ 45 Hz 1 kHz ,  ± (3.0% + 40) @ >10 kHz 20 kHz ,  • 1000 V @ 0.1 V :  ± (0.6% + 30) @ 45 Hz 1 kHz ,  ± (3.0% + 40) @ >10 kHz 5 kHz ,  ± (6.0% + 40) @ >5 kHz 10 kHz ,
DC current measurement:	$600 \ \mu A \pm (0.08\% + 20) \ @ \ 0.01 \ \mu A  , \\ 6000 \ \mu A \pm (0.08\% + 10) \ @ \ 0.1 \ \mu A  , \\ 60 \ m A \pm (0.08\% + 20) \ @ \ 0.001 \ m A  , \\ 600 \ m A \pm (0.15\% + 10) \ @ \ 0.01 \ m A  , \\ 10 \ A \pm (0.5\% + 10) \ @ \ 0.001 \ A$
AC current measurement:	• 600 μA @ 0.01 μA :  ± (0.6% + 40) @ 45 Hz 1 kHz  ± (1.2% + 40) @ >1 kHz 10 kHz  • 6000 μA @ 0.1 μA :  ± (0.6% + 20) @ 45 Hz 1 kHz  ± (1.2% + 40) @ >1 kHz 10 kHz  • 60 mA @ 0.001 mA :  ± (0.6% + 40) @ 45 Hz 1 kHz  ± (1.2% + 40) @ >1 kHz 10 kHz  • 600 mA @ 0.01 mA :  ± (0.6% + 20) @ 45 Hz 1 kHz  ± (1.2% + 40) @ >1 kHz 10 kHz  • 10 A @ 0.001 A :  ± (1.0% + 20) @ 45 Hz 1 kHz  ± (1.0% + 20) @ 45 Hz 1 kHz  ± (1.0% + 20) @ 45 Hz 1 kHz
Resistance measurement:	$\begin{array}{l} 600\ \Omega \pm (0.05\% + 10)\ @\ 0.01\ \Omega\ , \\ 6\ k\Omega \pm (0.05\% + 2)\ @\ 0.0001\ k\Omega\ , \\ 60\ k\Omega \pm (0.05\% + 2)\ @\ 0.001\ k\Omega\ , \\ 600\ k\Omega \pm (0.05\% + 2)\ @\ 0.01\ k\Omega\ , \\ 600\ k\Omega \pm (0.3\% + 10)\ @\ 0.0001\ M\Omega\ , \\ 6\ M\Omega \pm (2.0\% + 10)\ @\ 0.0001\ M\Omega \end{array}$



Code: UT-181A UNIVERSAL METER **UT-181A** UNI-T

Capacitance measurement:  Inductance measurement:  Frequency measurement:	$ 6 \text{ nF} \pm (3.0\% + 10) \oplus 0.001 \text{ nF} , \\ 60 \text{ nF} \pm (2.5\% + 5) \oplus 0.01 \text{ nF} , \\ 600 \text{ nF} \pm (2.0\% + 5) \oplus 0.1 \text{ nF} , \\ 600 \text{ nF} \pm (2.0\% + 5) \oplus 0.001 \text{ µF} , \\ 60 \text{ µF} \pm (2.0\% + 5) \oplus 0.001 \text{ µF} , \\ 60 \text{ µF} \pm (2.0\% + 5) \oplus 0.01 \text{ µF} , \\ 60 \text{ µF} \pm (5.0\% + 5) \oplus 0.001 \text{ µF} , \\ 60 \text{ mF} \pm (5.0\% + 5) \oplus 0.001 \text{ mF} , \\ 60 \text{ mF} \oplus 0.01 \text{ mF} - \text{visual measurement} $
rrequency measurement:	600 kHz ± (0.01% + 5) @ 0.01 kHz , 6 MHz ± (0.01% + 5) @ 0.0001 MHz , 60 MHz ± (0.01% + 5) @ 0.0001 MHz
Square-wave signal duty ratio measurement:	10 % 90 % ± (1.2% + 30) @ 0.01 %
Pulse width measurement:	250 ms ± (1.2% + 30) @ 0.001 ms 0.01 ms
Temperature measurement:	• °C -40 40 °C ± (2.0% + 30) @ 0.1 °C >40 400 °C ± (1.0% + 30) @ 0.1 °C >400 1000 °C ± 2.5% @ 0.1 °C, • °F -40 104 °F ± (2.5% + 50) @ 0.1 °F >104 752 °F ± (1.5% + 50) @ 0.1 °F >752 1832 °F ± 2.5% @ 0.1 °F
Automatic change of measuring ranges:	✓
hFE:	-
Diode test:	<b>✓</b>
Sound signal of the continuity test:	✓
Checking TTL logic states:	-
RS-232:	_
USB:	<b>✓</b>
Main features:	True RMS - accurate measurement of the RMS current and voltage for any waveform, Freezing the last reading, Freezing the highest or lowest measurement, Writing the value peak, REL - relative measurement mode, Analog bargraph, Possibility to save readings, access saved results and send them to a computer using the USB interface, Large, easy to read LCD graphic display with backlight, The ability to draw a trend graph of changes in the measured value over time based on the data stored in the device from continuous measurement, Save to 20000 measurement results in the device memory, Voltage level measurement (dBV/dBm), Low battery level alarm, Aesthetic and solid construction, The set includes a practical case
Power supply:	Built-in battery 7.4V / 2200mAh, the set includes a 10V / 500mA power supply and a power adapter for charging the battery

2024-05-24

UT-181A



Code: UT-181A UNIVERSAL METER **UT-181A** UNI-T

Weight:	0.62 kg
Dimensions:	226 x 104 x 63 mm
Manufacturer / Brand:	UNI-T
Guarantee:	2 years

#### Front panel:



Rear view:



User Manual

Code: UT-181A

UNIVERSAL METER UT-181A UNI-T



Battery:



In the kit:



Code: UT-181A UNIVERSAL METER **UT-181A** UNI-T



Device is secured by handy case:



PACKAGE

Dimensions (L x W x H): 0x0x0 mm Gross Weight: 0 kg