



User Manual

Code: GENIUS-MISTRAL-400LS/KIT
SWING GATE OPERATOR **GENIUS-MISTRAL-400LS/KIT** - SET FOR A TWO-LEAF GATE FAAC

Warning!

Please read the user manual included in this work as it contains important information related with safety of installation and use of the device.

Only persons who read the user manual may use the device.

The user manual must be kept because it may be required in the future. The device is to be used exclusively for purposes specified in this user manual.

The device must be unpacked prior to starting-up. After removing the packaging make sure the device is in working order.

If the product has defects, it should not be used until it is repaired.

The product is intended for use at home and commercial use and may not be used for other than intended use.

The manufacturer is not liable for damages resulting from not adhering to the rules contained in the user manual, therefore, we recommend to follow the aforementioned safety rules for operation and maintenance of the device. In this way you will ensure yourself safety and avoid causing damage to the device.

The manufacturer and the supplier are not liable for losses or damages arising out of the product, including financial or intangible losses, loss of profits, income, data, pleasure from use of the product or other products related with it - indirect, incidental or consequential loss or damage. The above provisions apply whether the loss or damage concerns:

1. Deterioration of quality or the lack of operation of the products or products related with it due to damage as well as the lack of access to the product when it is undergoing repair, which results in stoppage the loss of user's time or a break in business activity;
2. Improper results of operation of the product or products related with it;
3. It applies to losses and damages according to any legal category, including negligence and other losses, termination of a contract, expressed or implied guarantee and strict liability (even if the manufacturer or the supplier was notified about the possibility of occurrence of such damages).

Safety measures:

Particular attention at designing was directed to quality standards of the device where ensuring safety of operation is the most important factor.

The device must be secured against contact with caustic, staining and viscous fluids.

The device was designed in such a way that it restarts operation when power supply is restored after a break.

Turn off the device before transporting it.

Prior to connecting the device to a power source check whether the supplied voltage is consistent with rated voltage specified in the user manual.

Attention! We recommend using protections to further protect the device from possible overvoltages in installations.

Surge protectors are effective protection against accidental pass to the device voltages higher than the rated. Damages caused by pass the voltages higher than specified in manual, are not under warranty.

Proper product disposal:

A marking of a crossed out waste bin indicates that the product may not be disposed together with other household waste in the entire EU. To avoid possible damage to the natural environment of health due to uncontrolled waste disposal, therefore, it should be handed over for recycling, propagating in this way sustainable use of natural resources.

To return a worn-out product, use a collection and disposal system of this type of equipment or contact a seller from whom it was purchased. He will then be recycled in an environmentally-friendly way.

It is forbidden to use the device in case its power cord or plug is damaged, the device works incorrectly, was damaged or dropped. A damaged power cord or plug must be replaced with new ones by the manufacturer, personnel of service centre or a person with relevant qualifications in order to avoid the risk of electric shock. We do not recommend repairing the device on one's own for safety reasons.

The device is not intended for operation by persons (including children) with limited physical, sensory or mental capabilities as well as persons inexperienced in operation or not competent to operate of such device, unless the operation is supervised by a person responsible for their safety or in line with instructions for use provided by such person.

It is forbidden to touch the plug with wet hands! Pull the plug, never the cable, to pull out the plug from a socket.

The device is to be used exclusively according to its use described in this manual. Use of accessories not recommended by the manufacturer of the device may cause fire, electric shock or injuries.

Marking of a lightning inside a equilateral triangle signifies presence of dangerous voltage, contained under the cover of the device. It may be dangerous for user's life and health.

The GENIUS-MISTRAL-400LS/KIT operator is designed for swing gates with a single leaf length up to 4 m. Thanks to many technological facilities, the device is safe and comfortable to use.

The aluminum body is protected with a double protective coating, guaranteeing higher resistance to weather conditions. Horizontal outlet of the cables allows the actuators to be mounted close to the ground. The operator does not require the installation of locks (self-locking). In the event of, for example, a power failure, a simple gear unlocking mechanism located in the operator allows for manual operation of the gate.

The kit includes: 2 operators (actuators) - model MISTRAL 400 LS, BRAIN 19 controller, set of VEGA BUS photocells (transmitter + receiver pair), RQFZ 433 radio communication module, ECHO TX4 RC radio remote control, 4 emergency release keys, container box for the controller - model JA320 and necessary mounting accessories.



Gate operator type:	Mechanical, For swing gates - set for a two-leaf gate
Maximum expressed force:	3000 N
Engine type:	Asynchronous single-phase motor, 230 V AC
Maximum length of the gate:	4 m (single leaf)
Linear speed:	16 mm/s (max)
Automatic closing of the gate:	✓
Automatic locking of the operator:	✓
Limit switch:	✓
Possibility of connecting the photocell:	✓
Possibility of connecting the signal lamp:	✓
Maximum number of programmed remote controls:	250 Channels
Wireless transmission range:	≤ 50 m (in open area)
Frequency bandwidth of the system:	433.92 MHz
Number of cycles per hour:	~ 30
Main features:	<ul style="list-style-type: none"> • Self-locking operator • G-Way system • PROcoder safety system with Brain 19 control board • The aluminum body is protected with a double protective coating, guaranteeing higher resistance to weather conditions • Horizontal outlet of the cables allows the actuators to be mounted close to the ground • The container box for the controller is included
Power supply:	230 V AC / 50 Hz
Housing:	<ul style="list-style-type: none"> • Aluminum (MISTRAL 400 LS actuator) • Plastic (controller box)
"Index of Protection":	IP54

Color:	<ul style="list-style-type: none"> • Graphite (MISTRAL 400 LS actuator) • Light gray (controller box)
Operation temp:	-20 °C ... 55 °C
Weight:	7.9 kg (single gate opener)
Dimensions:	<ul style="list-style-type: none"> • 935 x 100 x 155 mm (single gate opener) • 260 x 200 x 95 mm (controller box)
Manufacturer / Brand:	FAAC / GENIUS
Guarantee:	2 years




In the case of operator or power failure, it is possible to manually release the lock using a key:




Connectors:



Gate operator controller:

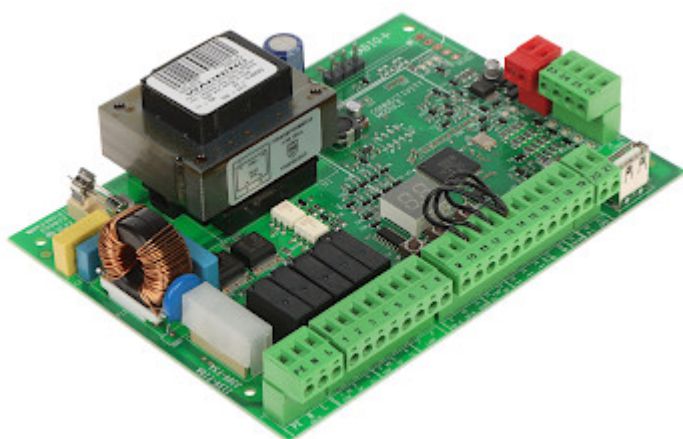

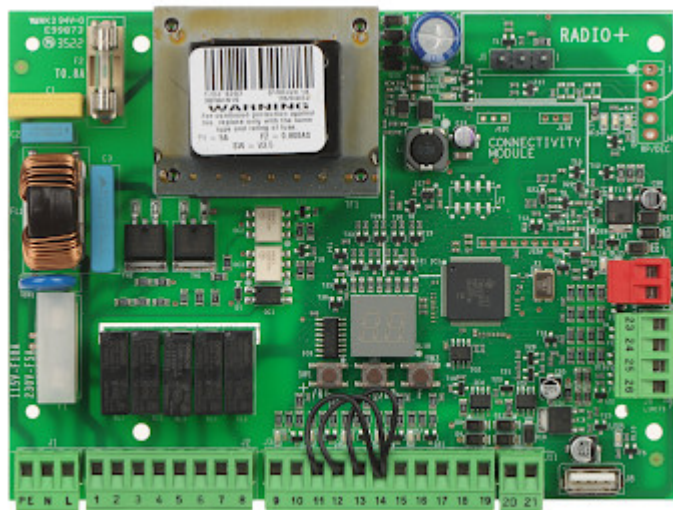

Included, among others photocells:





Remote control:



Radio module:



In the kit:



Dimensions (L x W x H): 0x0x0 mm	Gross Weight: 0 kg
----------------------------------	--------------------