

## Warning!

Please read the user manual included in this work as it contains important information related with safety of installation and use of the device.

Only persons who read the user manual may use the device.

The user manual must be kept because it may be required in the future. The device is to be used exclusively for purposes specified in this user manual.

The device must be unpacked prior to starting-up. After removing the packaging make sure the device is in working order.

If the product has defects, it should not be used until it is repaired.

The product is intended for use at home and commercial use and may not be used for other than intended use.

The manufacturer is not liable for damages resulting from not adhering to the rules contained in the user manual, therefore, we recommend to follow the aforementioned safety rules for operation and maintenance of the device. In this way you will ensure yourself safety and avoid causing damage to the device.

The manufacturer and the supplier are not liable for losses or damages arising out of the product, including financial or intangible losses, loss of profits, income, data, pleasure from use of the product or other products related with it - indirect, incidental or consequential loss or damage. The above provisions apply whether the loss or damage concerns:

1. Deterioration of quality or the lack of operation of the products or products related with it due to damage as well as the lack of access to the product when it is undergoing repair, which results in stoppage the loss of user's time or a break in business activity;
2. Improper results of operation of the product or products related with it;
3. It applies to losses and damages according to any legal category, including negligence and other losses, termination of a contract, expressed or implied guarantee and strict liability (even if the manufacturer or the supplier was notified about the possibility of occurrence of such damages).

### Safety measures:

Particular attention at designing was directed to quality standards of the device where ensuring safety of operation is the most important factor.

The device must be secured against contact with caustic, staining and viscous fluids.

1-row 12-modular flush-mounting distribution electric cabinet.

The satin material of the distribution cabinet and the cover with the door prevents the effect of mirror reflections of light.

The set includes 1 overcurrent circuit breaker type B16 (model LE-419136).





# User Manual

Code: LE-135361

FLUSH-MOUNTING DISTRIBUTION CABINET 12-MODULAR **LE-135361** Practibox S LEGRAND

Method of mounting:	Flush-mounted
Number of mounted modules:	12 x 1 row, 17.5 mm
Spacing between TH 35 rails:	—
Transparent door:	—
Main features:	<ul style="list-style-type: none"><li>• Removable chassis with TH 35 rails</li><li>• Reversible door</li><li>• Equipped with terminal blocks</li></ul>
Equipment:	<ul style="list-style-type: none"><li>• 1 x Circuit Breaker : Rated voltage : 230 V AC / 400 V AC, 50 / 60 Hz Rated current : 16 A Short-circuit current : 6 kA Tripping curves : B type</li><li>• Terminal blocks 1 pcs N : 5 x 16 mm<sup>2</sup> + 5 x 10 mm<sup>2</sup> , 1 pcs PE : 5 x 16 mm<sup>2</sup> + 5 x 10 mm<sup>2</sup></li></ul>
Material:	Self-extinguishing
Color:	White
"Index of Protection":	IP40
IK rating:	IK07
Compliance with standards:	IEC/EN 60670-24, IEC/EN 61439-3
Operation temp:	-10 °C ... 60 °C
Weight:	0.76 kg
Dimensions:	328 x 235 x 104 mm , 306 x 219 x 72 mm - flush-mounting box
Manufacturer / Brand:	LEGRAND
Guarantee:	2 years


Front view:



Internal view of the housing:



Terminals:

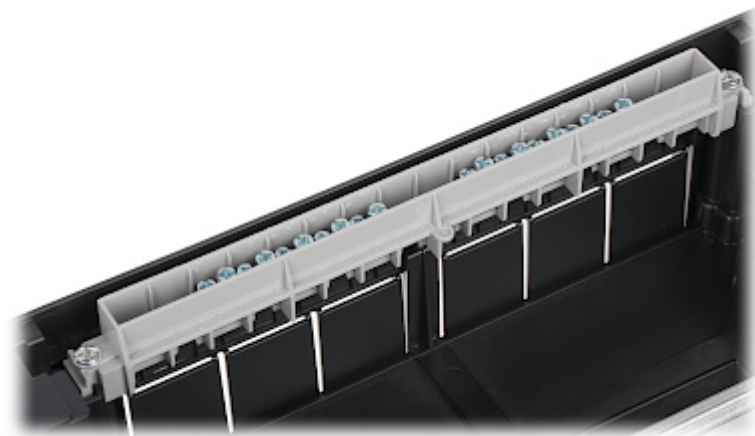


Mounting side view:



The set includes, among others 1 overcurrent circuit breaker type B16:



In the kit:

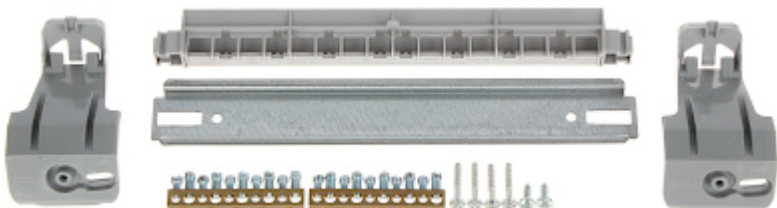

PACKAGE



# User Manual

Code: LE-135361

FLUSH-MOUNTING DISTRIBUTION CABINET 12-MODULAR **LE-135361** Practibox S LEGRAND

---

Dimensions (L x W x H): 0x0x0 mm	Gross Weight: 0 kg
----------------------------------	--------------------